



SLY SLV252

SLY SLV254

SLY SLV258

USER MANUAL

MP3 Video Player USER'S MANUAL

Cautions

- Do not subject the device to severe impact.
- Do not use the player in extreme temperatures, or in dusty or damp conditions.
- Back up the data frequently in case of accidental data loss.
- Avoid exposing the player to direct sunlight.
- Avoid using the player in strong magnetic fields.
- Keep the device away from water or other liquids. In the event that water or other liquids enter the device, power-off the product immediately and clean the device.
- Do not use chemical solutions to clean the device. Clean it with a dry cloth.
- We are not responsible for the damages or lost data caused by malfunction, misuse, repairing the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will void your warranty.
- The design of the player or actual display may be different from what is shown in this manual. It is subject to the actual display or design of the player.

Key Features

- Music Player
- Video Player
- Image Viewer
- Folder Navigation
- Voice Recorder
- Removable Storage Device
- Built-in Rechargeable Li-polymer battery
- Customized Settings

Before Using

● Connecting to a PC and download audio files

This player is plug and play for WIN2000 or above OS.

For Windows98/SE, you are required to install a driver before connection.

- (1) Plug the larger end of the USB cable into the USB port of the PC, and plug the smaller end into the USB port of the player.
- (2) When the  icon appears at the bottom-right of the PC screen, double-click "My Computer" on the desktop. You will see two Removable Disks that indicate the player. Use the Removable Disk as a regular local disk, copying files to and from it.

● Removing the player from the PC safely

Please remove the device from the computer safely in order to avoid data loss.

For Windows2000/XP:

- (1) Left-click the  icon located in the bottom-right corner of the taskbar.
- (2) Click the small pop-up window that says "Safely remove USB Mass Storage Device – Drive (X)".
- (3) When you are prompted to remove the device, unplug the player.

For Win98, please make sure the data transfer is completed before unplugging the player.

● Charging the battery


The device has a built-in lithium-ion rechargeable battery. It is charged via the USB connection. You are required to charge it when you use it for the first time. It takes about 3 hours to fully charge the battery.

To charge the battery, connect the larger end of the USB cable to the USB port of the PC, and connect the other smaller end of the USB cable to the USB port of the player. The device is connected to the PC and is being charged. If you want to know the charge progress, safely disconnect the device by clicking the  icon and selecting to "Safely remove the USB Mass Storage Device." You will see an animated battery icon indicating charge progress on the player. When the icon becomes green, the battery is fully charged.

Please charge the battery immediately when the display indicates low battery, or the device will be powered-off automatically.

Note: *For maximum performance, lithium-ion batteries need to be used often. If you don't use the device often, be sure to recharge the battery at least once per month.*

Basic Controls

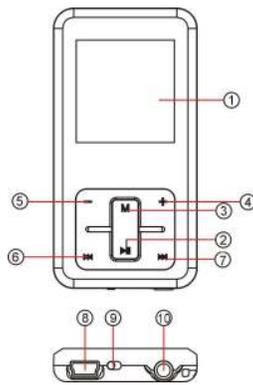

- **LCD Display**
- **PLAY/PAUSE:** Press to play, pause or cancel.
- **MENU:** Briefly press to confirm selection. Press and hold to enter the main menu.
- **VOL+:** Increase the volume
- **VOL-:** Decrease the volume
- **PREVIOUS:** Play the previous track
- **NEXT:** Play the next track
- **USB Port**
- **ON/OFF:** Push left to turn on the power; push right to turn off the power.
- **Earphone Jack**

Power On/Off

To power-on the device, push the **ON/OFF** button left, then press and hold the **▶||** button to turn on the screen.

To power-off the device, press and hold the **▶||** button to turn off the screen, then push the **ON/OFF** button right to turn off the power.

Note: This player has a power-saving feature which enables the device to power-off automatically if it is idle for about 3 minutes.

Lock/Unlock Buttons

To lock buttons, press and hold the “-” and “M” button together until you see the lock indicator on the screen.

To unlock the buttons, press and hold the “-” and “M” button together again.

Playing Music

- (1) Turn on the player to see the main menu. (**Note:** Pressing and holding the “M” button at any time can send you to the main menu.)
- (2) Press **◀◀ / ▶▶** to select “Music” on the menu. Press the “M” button to confirm your selection. The music should begin playing immediately.
- (3) During music playback, you can execute the following operations:

Function	Operation
Play/Pause	Press the ▶ button to play or pause.
Adjust Volume	Press the - / + button to increase or decrease the volume.
Play the previous track	Press the ◀◀ button.
Play the next track	Press the ▶▶ button.
Fast Forward	Press and hold the ▶▶ button.
Rewind	Press and hold the ◀◀ button.
A-B Repeat	To repeat a specified section of a track, (1) During playback, press and hold the “VOL+” button to select the start point. (2) Press and hold the “VOL+” button again to select the end point. (3) Press and hold the “VOL+” button to stop the section repeat.

- (4) Press the “M” button to return to the file explorer mode. You should see the list of music folders and tracks in the current directory. Press the **◀◀ / ▶▶** button to select a folder or track, and press the “M” button to confirm your selection. Press the **▶||** button to return to the previous folder of the directory.

Playing Videos

- (1) Press and hold the “M” button to display the main menu.
- (2) Press the I◀◀ / ▶▶I button to select “Video”, and press the “M” button to enter the video player mode.
- (3) Press the I◀◀ / ▶▶I button to select a video or a folder that contains video files, and press the “M” button to confirm or press the ▶▶I button to return.
- (4) During video playback, you can execute the following operations:

Function	Operation
Play/Pause	Press the ▶▶I button to play or pause.
Adjust Volume	Press the - / + button to increase or decrease the volume.
Play the previous video	Shortly press the I◀◀ button.
Play the next video	Shortly press the ▶▶I button.
Fast Forward	Press and hold the ▶▶I button.
Rewind	Press and hold the I◀◀ button.

(5) Press the “M” button to return to the file explorer mode. You should see the list of video folders and videos in the current directory. Press the I◀◀ / ▶▶I button to select a folder or video, and press the “M” button to confirm your selection. Press the ▶▶I button to return to the previous folder of the directory.

Note: This player can only play AVI videos. For other formats, you need to use the converting tool on the included CD to convert them. For detailed information about the converter, see “AVI Converter Quick User Guide” on the CD.

Viewing Photos

- (1) Press and hold the “M” button to display the main menu.
- (2) Press the ◀◀ / ▶▶ button to select “Photo” and press the “M” button to confirm.
- (3) Press the ◀◀ / ▶▶ button to select a folder or image, and press the “M” to confirm. Pressing the ▶▶ button will return you to the previous screen.
- (4) When you are viewing a photo, press the ◀◀ / ▶▶ button to display the previous or next photo.
- (5) Press the ▶▶ to start or stop the slide show while viewing photos.
- (6) Press the “M” button while viewing photos to return to the file explorer mode.

Note: Depending on the encoding format and resolution, some images may not be displayed. Try to use an image viewer to convert them before viewing.

Reading E-Books

- (1) Press and hold the “M” button to display the main menu.
- (2) Press the ◀◀ / ▶▶ button to select “Text” and press the “M” button to confirm.
- (3) Press the ◀◀ / ▶▶ button to select a text file, and press the “M” button to open the selected e-book.
- (4) When you are reading the e-book, you can:
 - Press the ◀◀ / ▶▶ button to page up or down manually.
 - Press the ▶▶ button to start or stop the slide show. In the slide show mode, the e-book pages go up or down automatically (set the time interval in Settings/Auto Slide Show/Text Browse). If you want to page up or down manually, press the ▶▶ button to stop the slide show.
 - Press the “+” button to tag a bookmark on the current page for reading later. The “Save Bookmark” window should appear. Press ◀◀ / ▶▶ to select a location for saving the bookmark, and press the “M” button to confirm, or press the ▶▶ button to cancel.
 - To go to the page that you marked, press the “-” button to display the “Load Bookmark” window. Press ◀◀ / ▶▶ to select a bookmark, and press the “M” button to confirm.
- (5) Press the “M” button to stop reading and return to the file explorer mode.

Note: Some TXT files may not be read. This may be caused by an unsupported format. Skip it or reload another text file.

Explorer

● Browsing all files

To browse all files stored in the player,

- (1) Press and hold the “M” button to display the main menu.
- (2) Press **⏪** / **⏩** to select “Navigation”, and press the “M” button to confirm.
- (3) In the file explorer mode, press **⏪** / **⏩** to select a folder or file, and press the “M” button to confirm or press the **⏹** button to return.

● Deleting files

To delete a file,

- (1) In the file explorer mode, press **⏪** / **⏩** to select the file that you want to delete.
- (2) Press the “-” button to delete it.
- (3) Press **⏪** / **⏩** to select “YES”. Press “M” to confirm or press the **⏹** button to cancel.

Voice Recording

- (1) Press and hold the “M” button to display the main menu.
- (2) Press **⏪** / **⏩** to select “Record”, and press the “M” button to enter the recorder mode.
- (3) Press the **⏹** button to start recording. During recording, you can press the **⏹** button to pause or resume recording.
- (4) Press the “M” button to stop and save the recording.
- (5) To play the recording, press and hold the “M” to display the main menu.
- (6) Press **⏪** / **⏩** to select “Navigation” and press the “M” button to confirm and enter navigation mode.
- (7) Press **⏪** / **⏩** to select the “VOICE” folder, and press the “M” button to open it.
- (8) Press the **⏪** / **⏩** button to select the recording file, then press the “M” button to play it. For detailed information about playing audio, refer to the “Playing Music” section.

System Settings

To customize the player settings:

(1) In the main menu, select "Settings", then press the "M" button to enter the system settings mode.

(2) Press the ◀◀ / ▶▶ button to select a setting item, then press the "M" button to confirm or press the ▶| button to cancel and return to the main menu.

Music	Repeat mode	Once (Play current track once and then stop)
		Repeat One (Repeat current track)
		Folder Once (Play all audio files in the current folder and stop after playing)
		Folder Repeat (Repeat all audio files in the current folder)
		Normal (Play all audio files stored in the player and stop after playing all)
		Repeat All (Repeat all audio files stored in the player)
		Intro (Play the first 10 seconds of every audio file)
	Play mode	Order (Play audio files in order)
		Shuffle (Play audio files randomly)
	Preset EQ	Normal, 3D, Rock, Pop, Classic, Bass, Jazz, User EQ
User- EQ Set (User-defined equalizer setting)	<ol style="list-style-type: none"> (1) Press the ◀◀ / ▶▶ to switch the EQ column. (2) Press the - / + button to adjust the level. (3) Repeat pressing the ▶ button until the cursor is on the YES button, and then press the "M" button to confirm. Or, select "No" to quit. (4) Go to the Preset EQ menu, and select User EQ to enable the equalizer setting. 	

Record	REC Quality	High Quality, General Quality
	REC Volume	+1, +2, +3, +4, +5
Auto Browse	Text Browse (Set interval between the previous and the next page when the device is in auto page up/down mode)	
	Photo Browse (Set interval between the previous and next slides in auto slide show mode)	
Display	Backlight Time	5 seconds, 10 seconds, 15 seconds, 20 seconds, 30 seconds, Always On.
	Brightness (Set the brightness of the screen)	
	Backlight mode	Normal Power Save (Turn off the screen when there is no activity within a certain time)
System	About – system information about the player	
	Upgrade – upgrade firmware	
	Load Default - Restore system settings to default	
Power off	Set the continuous working time before the player is turned off automatically.	
Language	Select the language in which the on-screen text is displayed	

Troubleshooting

Problem	Possible Cause	Solution
The LCD displays nothing when the device is started.	Battery is too low.	Charge the battery.
No sound when playing an audio file.	The volume is too low.	Adjust the volume.
	Bad audio file.	Delete or skip the file.
The player cannot be connected to the PC.	The USB interface is not supported by PC's motherboard.	Update or replace the PC's motherboard.
The displayed time is changing constantly.	The bit rate of the MP3 file is changing during playback.	Try to use fixed bit rate to compress the MP3 file.

The PC shows error when you plug/unplug the player.	The player is disconnected from the PC abruptly while transferring files.	Do not disconnect the player from the PC when transferring files. (Safely Remove Device)
Total memory displayed on the player is not in accordance with the marked amount.	Part of memory is used to store programs and display characters.	
Some of MP3 files cannot be played properly.	The MP3 file is compressed by a standard, such as MPEG I Layer 1 or Layer 2 that the player does not support.	<ol style="list-style-type: none"> 1. Delete the unsupported MP3 files. 2. Use MPEG I Layer 3 standard to compress the unsupported MP3 files.
The video cannot be played.	The file format is not supported.	Make sure the video is in AVI format. If not, use the provided converting tool to convert it.
	The video data is corrupted	Skip it or reload another file
The photo cannot be displayed	The file format is not supported	Try to use an image editor to convert it.
	The image resolution is beyond limitation of the device.	The device supports a maximum resolution of 2048×2048. Make sure resolution of the image does not exceed this limitation.
The TXT file cannot be read	The file format is not supported.	Skip it or reload another file.