




## QUICK START GUIDE

### Main Buttons

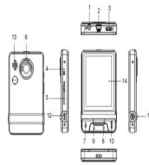

- To turn the player off, simply switch the player to the "OFF" position.

**Adding Files**

- Connect your player to your computer, and plug the power on "OFF" on the player.
- Open the drive that appears as "My Computer" which contains the player (usually called "Removable Disk").
- Copy the files you want into the correct folder.
- When the power on the audio folder, select any one video folder, and so forth.
- All music needs to be in the AUDIO folder. We recommend that you do not use, with Windows Media Player, because it can corrupt your player with Windows Media Player. Follow these steps when initially setting the device:
  - Open Windows Media Player and the player connected, click on the sync tab.
  - Click on the arrow at the bottom of the sync tab.
  - Click "Sync Manager" and check the box from the submenu.
  - Click the "Yes" button "Sync" this device automatically" in the window that pops up and click "Next".
  - Highlight the files you want transferred to your device and drag them into the Sync List column.
  - Click "Sync" to transfer the files.
  - When the conversion is finished, open the removable disk that contains to your player. There will be a new folder called "Music".
  - Drag the "Music" folder into the AUDIO folder. Your songs will now be available on the device.
- When the folder appears if you select. If you want to add more songs using Windows Media Player you hit ST on the "Music" folder back to where it was the main level of the removable disk before adding additional songs. Do not move files into the AUDIO folder until finished copying. To delete files, select three steps:
  - Open removable disk and go to the AUDIO folder.
  - Right-click on the "Music" folder and select Cut.
  - Hit "Del" on the window to go back to the main level of the removable disk.

- Right-click and select Paste. Your music folder will now be visible next to the AUDIO, VIDEO, PICTURE, and AUDIO folders.
- Go to Windows Media Player and add files to the Sync List that you would like transferred to your player.
- Hit "Start Sync" to transfer the files.
- When transfer is complete, drag the "Music" folder back into the AUDIO folder on the removable disk. Your files will now be available on the player.

*Please Note: This player does not support songs protected on iTunes® (Compatible formats are MP3, AAC, and AAC+).*

**Connecting Transferring Files**

Transfer files to the player. The files must be converted into the correct format.

- To install the Conversion Software from the CD that came with the player, insert the CD into your computer.
- Open the CD folder and select AUTORUN.
- Select "Install Transferring Tool" and then click NEXT.
- Click YES (Y) and the program will install to your computer.
- Connect your player using the USB cable.
- Open the Video Converter.
- Click: Start—>Programs—>Mikrotik Transferring Tool/Video Converter.
- At the bottom of the converter box, click BROWSE.
- Find the Removable Disk, and select the VIDEO folder as the source destination for the converted files.
- Click "Add File" and search for the files you would like converted.
- Your files will appear on the list.
- Hit "Start" and your videos will convert and save directly to the player.
  - To save the device the files transfer location. To do simply copy the converted files from where you saved them and paste them into the VIDEO folder on the Removable Disk.

**1. Location** Connect with the supplied antenna.

**2. LED light** Power on/off.

**3. Side** Built-in microphone for voice recording.

**4. ST** Built-in TV card.

**5. Power** Built-in 2.4V Lithium digital camera.

**6. Camera** Power on/off/Quick Shot/Photo playback view and zoom from the submenu.

**7. Play** Previous track, over/hold for 2 seconds and stop.

**8. Stop** Stop track, hold for 2 seconds for 2 seconds and stop.

**9. Menu** Short Press to go back to main menu. Long press it will display sub-menu.

**10. Camera button** Camera button to start/stop the TV.

**11. Vol** Volume button.

**12. Repeat** Repeat button.

**13. Screen** Screen display area.

**The Quick Start Guide is designed to give an overview of how to use the player. For more detailed information, please refer to the User Manual with step-by-step instructions & pictures.**

**Connecting your computer**

Connect the player to your computer for transferring files or charging the battery.

Note: Upon opening the product, please immediately charge the unit for 4 hours. The battery of the player charges automatically when the player is connected to the computer.

- Plug the larger USB end of the supplied USB cable into the USB port on the computer.
- Plug the other end (the smaller end) of the USB cable into the player.
- The computer will detect the "New hardware" and open to install the driver automatically.
- Wait for the system to finish the installation.
- When a blue flag icon, a new "Removable Disk" will be assigned to "My Computer".

**Powering the Player**

After connecting the battery, please disconnect the USB cable by the following step:

- Double-click the program "Safety Remove Hardware" in the taskbar on the bottom right of the window.
- Select "USB Drive" and click "Yes".
- When "Stop Hardware Device" appears, click "OK" to disconnect the USB mass storage device.
- Remove the device from your computer.

**Main Controls**

- On the left side you will find the power switch, USB port, and antenna jack.
- On the right side you will find the CAMERA and MENU buttons, as well as the PLAY, PAUSE, and STOP buttons.
- The PLAY button is also used to select options.

**Turning the Player On and Off**

- Switch the player on the "OFF" position.
- Press and hold the PLAY button for 3 seconds.
- Your player will power on.

**Using Menu**

- To view menu, select the Audio/Power from the main menu.
- Your list of songs will appear on the right side of your screen.
- Press the PAUSE button and your song will stop.
- To adjust the volume, press the VOLUME button (located on the bottom of the player) to adjust the volume control. Use the PAUSE button to adjust the volume. Press the VOLUME button again to check volume again.
- To go back to the previous screen, press the MENU button.
- When in the menu screen, press the MENU button to open the submenu.
- To navigate the submenu, use the PAUSE button to scroll through the options.
- Press PLAY to select your options.
- To return to your song on the list in Special, simply remove the headphones.

**Using and Removing Batteries**

- Select the Camera button from the main menu.
- Use the CAMERA button to take pictures.
- Return to the main menu and go to Power to view the battery level of the player you have just installed.
- To adjust photo, press and hold the MENU button to open the submenu.
- Hit the camera button to open to adjust your pictures.

**Removing the Battery**

- Select the CV option from the main menu.
- Press PLAY to open the camera view.
- Pressing PLAY stops the video recording.
- Use your own care to the Video Player folder.
- Scroll through the Video/Power folder and press the PLAY button on your file to view your video.
  - Unplugged volume and battery will show to the folder.

**Charging**

- Select the Charging option from the main menu.
- Select the folder called "TV" which is where your tv files will be located.

**Turning the Storage in Memory**

- Insert your card into the player.
- Select TV from the main menu.
- Select the memory option, then select the CD tab.
- Select work space. It will then create the necessary folders on your card.
- Connect the player, making sure it is in the "OFF" position.
- Go to My Computer, select Removable Disk, and access your MemoryD and from there.
- Copy the files from your computer into the relevant folders that were created on your card.

**For Playback Files**

- If your computer is running Windows XP SP3, you may need to format the drive provided on the CD before connecting the player to your computer.
  - Insert the installation CD into the CD-ROM drive.
  - Connect the "Write Driver" file on the CD and follow the instructions to complete the installation.
  - Restart the computer.
- Note: Make sure the player is disconnected from the computer when installing the driver.

**Email us with any Technical issues at: [support@syelectronics.com](mailto:support@syelectronics.com)**

©2008 is a registered trademark of Apple Inc.  
Windows Media Player is a registered trademark of Microsoft Corporation.